

# volcano

*Outback Series*



---

## **BLUETOOTH WIRELESS** **SPLASHPROOF OUTDOOR SPEAKER**

---

### **INSTRUCTION MANUAL**

Please read and retain these instructions for future reference.

## Package Contents:

- Outback Speaker
- Charging cable (Micro-USB)
- User manual

## Specifications:

Bluetooth Version: V4.2

Bluetooth Profiles: A2DP, AVRCP and HFP

Bluetooth Range: 10 m

Battery Capacity: 500 mAh

Playback Time: 1 hours (80% Volume)

Product Size: 190x49x87mm

Speaker Output: 3W

Frequency Response 120 Hz - 18 kHz

Charge Power: 5V / 1A

Water-proof: IPX4

## Identifying Parts:



1. On/Off switch
2. Charging port

## Charging

You must completely charge the Outback Speaker before the first use. Connect the USB charging cable to any powered USB port and to the Micro-USB port on the back of the speaker. Make sure it is plugged in fully. The LED light will be lit while the speaker is charging.

## Instructions for Use:

### Turning on and off

To turn on, flick the power switch to the “On” position. The speaker will beep twice, the LED will start flashing blue. To turn off, flick the power switch to the “Off” position.

### Pairing with bluetooth devices

Your speaker must be paired to a Bluetooth device before it can be used. It is only necessary to pair your speaker once with each device.

1. Open the Bluetooth menu on the device you wish to pair (see “Locating the Bluetooth Menu” for more details). Some devices require you to select “Search for Devices” or “Add New Device” in order to create a Bluetooth pairing.
2. With the speaker turned off, flick the power switch to the “On” position. The speaker will beep twice, the LED will start flashing blue while the speaker is in pairing mode.
3. Wait until you see “Outback Speaker” on your device screen.
4. Select “Outback Speaker” on your device and follow any further prompts to pair. Once pairing is complete and a connection is established, the speaker will beep 3 times and the blue LED light will flash at a slower rate.

### Locating the bluetooth menu

iPhone, iPad, and iPod Touch

- a) On your device, go to Settings
- b) Select Bluetooth. If Bluetooth is not on, turn it on. The iPhone/iPad/iPod will automatically search for new devices

## **Android™ Phones and Tablets**

- a) On your device, go to the Settings menu
- b) Select Bluetooth (on older Android devices Bluetooth is found in the Wireless & Networks menu). If Bluetooth is not on, turn it on. Select “Search for Devices” if your phone or tablet does not automatically search for new devices

## **Windows® Phone 8 Devices**

- a) On your device, open the Settings menu
- b) Select Bluetooth. If Bluetooth is not on, turn it on. The Windows phone will automatically search for new devices

## **Connecting with paired devices**

Once the Outback Speaker is turned on, it will automatically connect with the last paired Bluetooth device that is on and within range. If the Outback Speaker does not connect automatically, open the Bluetooth menu on your device and select “Outback Speaker” from the Bluetooth device list.

## **Trouble Shooting:**

1. My mobile phone can't find any new Bluetooth devices?
  - a. Ensure the Device has entered the pairing mode.
  - b. Ensure the Device is within effective working range.
2. Bluetooth device can't pair up?
  - a. Ensure your mobile phone allows new connections and has not reached the maximum number of allowed devices.
3. The Device does not play music or answer calls when it is connected to a Bluetooth mobile phone.
  - a. Ensure your mobile phone supports A2DP and HSP (hands-free) profiles.
  - b. Ensure your mobile phone is within effective working range.
4. When paired with my computer, windows asks for a new driver. Can you supply this? We recommend you find compatible drivers for your computer online.

5. Why can I not remotely control the pause, play, previous and next functions when music is playing?
- When you are using 3.5mm AUX connection, you can't pause, change volume or skip tracks.
  - This feature needs the Bluetooth device paired with the speaker to support AVRCP (Audio/Video Remote Control Profile). Please ensure your device supports this.

## Safety Precautions

- The product should only be used with the parts provided by the manufacturer.
- Never use your speaker near water or in areas where it can come into contact with water. Never handle the speaker if they were dropped in water or any other liquid. If the product comes into contact with water while switched off, but still plugged in, this is a safety hazard.
- Always make sure your hands are dry before touching the plug or power connections.
- Do not operate the product with a damaged cord or plug, or after it malfunctions, has been dropped, or damaged in any manner.
- The speaker is intended for personal use only. Commercial use invalidates the warranty and the supplier cannot be held responsible for injury or damage caused when using the device for any other purpose than that which it was intended for.
- These speaker is not intended for use by children, or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the device by a person responsible for their safety. Extreme caution must be exercised.
- Children should be supervised to ensure that they do not play with the speaker. Packaging must never be left within reach of children, since it is potentially dangerous.

## **Environmentally Friendly Disposal**

Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.