volkano

Lunar Series

BLUETOOTH
WIRELESS HEADPHONES

INSTRUCTION MANUAL

Please read these instructions carefully and retain for future reference.

VK-2004-WTGD

HIGHLIGHTS

- Bluetooth Wireless: V4.0
- Charge Input: DC 5V 1 A
- Playback Time / Music Time: ± 7 Hours
- Standby Time: 30 Hours

PACKAGE CONTENTS

- Volkano Lunar Bluetooth Headphones
- Micro USB Charging Cable
- Aux Cable
- Instruction Manual

SPECIFICATIONS

- Bluetooth:
  - Version: 4.0
  - Range: 10 m
- Playback Time: ± 7 Hours
- Battery Capacity: 3.7 V, 300 mAh
- Charge Time: ± 1.5 Hours
- Battery Type: Lithium-Ion
- Power Requirement: 5V DC, 1 A

IDENTIFYING PARTS

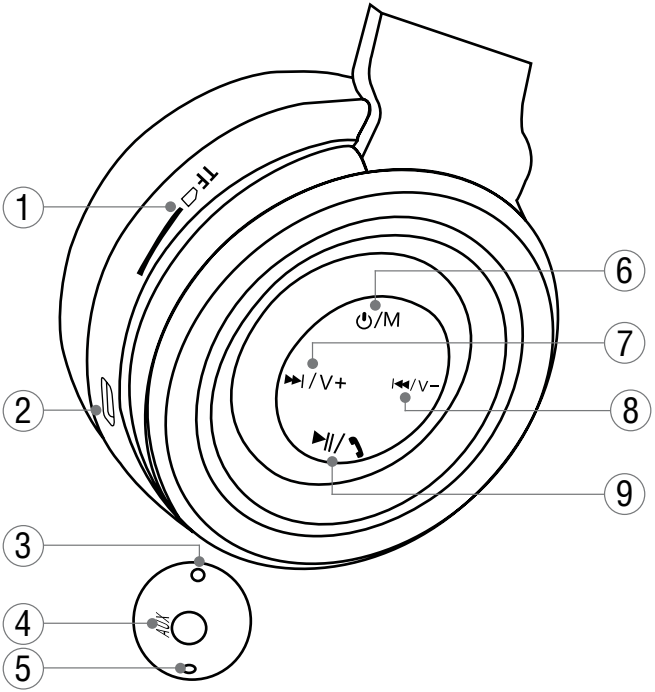

1. TF Slot
2. USB Charging Port
3. Microphone
4. Aux-in Cable
5. LED Light Indicator
6. ⏻/M Power Button / Mode Switch (TF Mode, Radio Mode, Bluetooth Mode)
7. ⏭/V+ Next Song / Increase Volume
8. ⏮/V− Previous Song / Decrease Volume
9. ▶II/ Play / Pause / Answer Calls

INSTRUCTIONS FOR USE:

CHARGING THE HEADPHONES

Connect the USB A end of the Charging Cable to a USB Charging Port and insert the Micro USB end to the port on the Lunar Headphones. Make sure it is properly connected. A Red Indicator Light will immediately light up followed by a Blue Indicator Light to indicate charging mode. Once the Lunar Headphones have fully charged, the Blue Indicator Light will turn off and the headphones will be ready for use.

SWITCHING ON / OFF THE HEADHONES

1. Start-up: Long press the "⏻/M" button for approximately 3 seconds, the headphones will start up and enter "Bluetooth Mode" automatically, the LED Indicator Light turns Blue.
2. Shutdown: Long press the "⏻/M" button for more than 3 seconds, the LED Indicator Light turns off.

PAIRING WITH BLUETOOTH DEVICES

a) Hold the "⏻/M" button to turn on the Lunar Headphones.
A short tone plays to indicate the headphones are on.
Turn on Bluetooth mode on your mobile device and search for the "Lunar".
No password is required to establish a pairing.
While the headphones are searching for a device, the Indicator Light will rapidly alternate between Blue and Green.
Once connected to a mobile device, the Indicator Light will change to Blue and the headphones will play a short tone.
The Indicator Light will flash once every second to indicate that it is in use.

NOTE:

- The Lunar Headphones will automatically pair to the last mobile device used.
- If no device is found within 3 seconds, the Lunar Headphones will automatically re-enter Pairing Mode.
- If no connection can be established after 5 minutes, the Lunar Headphones will automatically switch off.
- When connected to an Aux Cable, the Lunar Headphones will switch off to save power.

MICRO SD CARD PLAYBACK MODE

Insert the Micro SD Card, the LED Indicator Light turns to Green, a short tone prompts "Music". Then it plays media automatically, the LED Indicator Light turns to Green flashing every 4 seconds.

FM RADIO MODE

1. Turn the Lunar Headphones ON " ⏻/M " until you see the Indicator Light change to Green.
2. Press the Play / Pause Button " ▶II/ " to enter FM Radio Mode and it will play a short tone. Press the Play / Pause Button " ▶II/ " to automatically scan radio stations.
3. To scan through radio stations, press the "▶▶I/V+" Next Track or the "I◀◀/V−" Back Buttons and fine tune.

CONTROLS

1. Volume Controls

Function	Operation
Increase Volume	Long press the ▶▶| / V+ Next Track / Volume Up Button
Decrease Volume	Long press the |◀◀ / V– Previous Track / Volume Down Button

2. Audio Controls

Function	Operation
Play or Pause Track	Short press the ▶II/ Play / Pause / Call Button
Next Track	Short press the ▶▶| / V + Next Track / Volume Up Button
Previous Track	Short press the |◀◀ / V– Prev Track / Volume Down Button
Hang Up	Short press the ▶II/ Play / Pause / Call Button
Redial	Double press the ▶II/ Play / Pause / Call Button

Aux-in Mode
When the headphones are on, insert the Aux Cable and the headphones will play a short tone.Then it plays the smart device's media automatically.

LED Indicator

Charge Status	LED Indicator Light will turn Red and then Blue to indicate charging mode
Power on Status	Blue LED Indicator Light turns on
Power off Status	LED Indicator Light turns off
Pairing Status	Green and Blue LED Indicator Lights rapidly alternating flash
Standby Status	Blue LED Indicator Light turns on
Connected Status	Blue LED Indicator Light turns on
Mode Indicator	Blue LED Indicator Light flashes every 4 seconds Radio Mode: Green LED Indicator Light turns on Micro SD Card Mode: Green LED Indicator Light flashes every 4 seconds Aux-in Mode: The headphones automatically turn off, the LED Indicator Light turns off

SAFETY PRECAUTIONS

- The product should only be used with the parts provided by the manufacturer.
- This product is intended for indoor use only.
- Never use your Lunar Headphones near water or in areas where they can come into contact with water. Never handle the Lunar Heaphones if they have been dropped in water or any other liquid. If the product comes into contact with water while still plugged in, this is a safety hazard.
- Always make sure your hands are dry before touching the USB cable or power connections.
- Do not operate the product with a damaged cable, or after it malfunctions, has been dropped, or damaged in any manner.
- The Lunar Headphones are intended for personal use only. Commercial use invalidates the warranty and the supplier cannot be held responsible for injury or damage caused when using the device for any other purpose than that which it was intended for.
- The Lunar Headphones are not intended for use by children, or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the device by a person responsible for their safety. Extreme caution must be exercised.
- Children should be supervised to ensure that they do not play with the Lunar Headphones. Packaging must never be left within reach of children, since it is potentially dangerous

CLEANING AND CARING INSTRUCTIONS

- **Before Cleaning:** Ensure that your Lunar Headphones are not charging before cleaning or maintaining them.
- **Cleaning:** Wipe down the surface of your Lunar Headphones using a soft, slightly damp cloth.
- Do not use any harsh or abrasive cleaning chemicals or materials on your Lunar Headphones as doing so may damage or scratch the surface finish.
- Do not expose your Lunar Headphones to direct sunlight or high temperatures for extended periods of time.
- Do not store in temperatures over 140 °F (60 °C).

TROUBLESHOOTING

1. My mobile phone cannot find any new Bluetooth devices?
a. Ensure the Device has entered the pairing mode.
b. Ensure the Device is within effective working range.

2. Bluetooth device cannot pair up?
Ensure your mobile phone allows new connections and has not reached the maximum number of allowed devices.

3. The Device does not play music or answer calls when it is connected to a Bluetooth mobile phone.
a. Ensure your mobile phone supports A2DP and HSF (Hands-free) profiles.
b. Ensure your mobile phone is within effective working range.

4. When paired with my computer, Windows asks for a new driver. Can you supply this?
We recommend you find compatible drivers for your computer online.

5. Why can I not remotely control the pause, play function when music is playing?
This feature needs the Bluetooth device paired with the earphones to support AVRCP (Audio / Video Remote Control Profile). Please ensure your device supports this.

ENVIRONMENTALLY FRIENDLY DISPOSAL



Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.

DISCLAIMER

All products and company names are trademarks™ or registered® trademarks of their respective holders. Use of them does not imply any affiliation with or endorsement by them.

WARRANTY

These Volkano Lunar Headphones come with a standard 12-month limited warranty against manufacturing defects and faults. Should your product be unboxed with any faulty parts, poor finishing or visible damage, or fail to perform due to a manufacturing defect or poor workmanship, please return it with your proof of purchase (till slip or invoice) to the store of purchase for an exchange, or repair, depending on the store's returns policy.
This warranty commences from the date of purchase.
Kindly retain your proof of purchase as well as the packaging for your warranty period.

NOTE:
The Warranty does not apply to a product that:
a.) Has failed due to excessive wear and tear beyond what is considered to be reasonable.
b.) Has been misused or neglected.
c.) Has been damaged accidentally or by acts of God including fire and flooding.
d.) Has been used or operated contrary to operating or maintenance instructions outlined in this manual.

The Store of Purchase / Seller cannot accept any returned products that have not been returned in accordance to this warranty or which does not follow their own Returns Policy. Please refer to the Store of Purchase / Sellers Returns Policy for details.
Should you require any further assistance or have any questions on your warranty, please contact the store of purchase.